
Owner`s manual & Installation manual



Phone voice wake up



For App Control Scan
QR code




download this app from
playstore or appstore



MP3 Receiver control High power

The Main Unit

- ① **⏻ Button**
On/off switch (stand by mode)/
to select the AUX IN mode./the USB/SD
play mode(player with bluetooth).
- ② **CLK Button**
Clock programming.
- ③ **BAND Button**
Select the band/search and store
stations automatically/the USB/SD
play mode.
- ④ **Remote sensor**
The maximum operation range is 24 feet.
- ⑤ **⏸ Button**
Mute and pause/select the loudness.
- ⑥ **OPEN Button**
Open the front panel.
- ⑦ **VOLUME Button**
Increase the volume/clock time
adjustment(upwards).
Decrease the volume/clock time
adjustment(downwards).
Select the sound characteristics, local stations.
- ⑧ **DIGITAL Button**
Preset the radio station on number 1/
play introduction mode.
Preset the radio station on number 2/
play random mode.
Preset the radio station on number 3/
play repeat mode.
Preset the radio station on number 4/
select a number previous 10.
Preset the radio station on number 5/
select a number above 10.
Preset the radio station on number 6/
select the audio channel.
- ⑨ **▶ Button**
Play/Pause.
- ⑩ **⏮ Button**
Play the previous track/search backward.
/Telephone hook(player with bluetooth).
- ⑪ **⏭ Button**
Play the next track/search forward.
/Telephone answering(player with bluetooth).
- ⑫ **USB PORT**
- ⑬ **SD CARD SLOT**
- ⑭ **AUX IN** 

Instructions

Listening to the Radio

● Programming a station

You can store up to 18 FM stations: (6 stations each for FM1, FM2 and FM3), and up to 12 AM stations: (6 stations each for AM1 and AM2)

- Pressing the "BAND" button on the unit or remote will cause the unit to shift through the following bands (in order):
- Press ◀◀ / ▶▶ to select your desired station. Then, hold the button for 2 seconds to search to the next station.
- Press ◀◀ / ▶▶ to select your desired station. Then, hold one of the number buttons (1-6) on the unit or remote for 2 seconds to store the station.

● Listening to the radio

- Press the "BAND" button to select the band.
- Press number buttons 1-6 to select your desired station.

● Auto Preset Station

- Press the "BAND" button for more than 2 seconds to have the unit store the radio stations of each digital number button.

AUX IN

Press the Φ button on the front panel for 2 seconds to select the AUX IN function.

Select USB SD

Press the "BAND" button for 2 seconds or press the " Φ " button (player with bluetooth) to choose between the USB and SD port.

Audio control

- Press "+" or "-" on the panel to adjust the volume within 0-40.
- Press SEL until it shows BAS, then adjust the volume switch within -7+7.
- Press SEL until it shows TRE, then adjust the volume switch within -7+7.
- Press SEL until it shows BAL, then adjust the volume switch for the left

and right channel within L07-R07.

- Press SEL until it shows FAD, then adjust the volume switch for the front and rear speakers within R07-F07.

EQ control

- Press SEL until the face shows EQ OFF, then adjust the volume switch for the four kinds of built in sound field effects: ROC. POP.CLASS.JASS.

7 color LED light setting

Press the volume button for 3 seconds to display menu, then rotate the volume button to select mode according to the following.

- AUTO mode: 7 colors display automatically.
- FLASH mode: level change colors with the music.
- USER mode: short press the volume button to select the 3 colors you like. Red, green, blue, the brightness of each color will be adjusted from 1-32 while you rotate the volume button.

Bluetooth

- Change the host unit to Bluetooth mode, set your mobile BT on, then use your mobile to search BT device (the host unit BT name is AR-KIT) then pair your mobile with the connection with the host unit.
- The unit display show "BT" while on connection mode; shows "BT on" while successful connected.
- While successful connected, the host unit makes "DENG" notification tone. Then turn on your mobile audio music player, music can be played from the host unit BT function. When the BT device on, the host unit will make "DING" notification tone.

Phone voice wake up

After connecting to the mobile phone in Bluetooth mode, long press the volume button to wake up the voice assistant of the mobile phone.

Specifications

General

Power requirements 12.0 V DC
(power source range:
12.0 -13.8 V DC)

GND Connection --- Negative

Maximum Current Consumption 7.0A

Dimensions (w/h/d) :

Main Unit: ----- 181X50X135(or 100)mm

Housing: ----- 183X53X173mm

Mass ----- 0.4Kg/0.5Kg/0.55Kg

Audio

Maximum power output 50WX4

Speaker impedance --- 4Ω

Bass ----- ± 7dB(100Hz)

Treble ----- ± 7dB(10kHz)

FM Tuner

Tuning range ----- 87.5-108MHz

Usable sensitivity --- 14dB

Signal-to-noise ratio -- 60dB

Harmonic distortion --- <1% (1kHz)

Frequency response -- 30-15,000Hz

Separation ----- 35dB (1kHz)

AM Tuner

Tuning range ----- 530-1710KHz

(522-1620KHz)

Usable sensitivity --- 36dB



Note

*Design and specifications are subject to
change without notice.* ■

<PUSAT><784772N8>

Published by Corporation.
Copyright © 2016 by Corporation.
All rights reserved.

<QRB3081-A>EW